

# TBW Under Tray Install

2009-2014 Acura TSX

STUDY THESE INSTRUCTIONS BEFORE INSTALLATION.  
INSTALLER MUST HAVE A KNOWLEDGE OF AUTOMOBILE SYSTEMS.  
IF UNFAMILIAR WE RECOMMEND INSTALL BE COMPLETED BY A  
QUALIFIED PROFESSIONAL.

Tools Needed for install:


- Flathead screwdriver
- 10mm socket/wrench/drill
- Rivet Nut Tool

**WARNING!**


CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.

#1. Remove the OEM Plastic Push clips and any OEM plastic under tray  
Remove the **PLASTIC PUSH CLIPS** (use flathead screw driver)

#2 Install 6mm Rivet Nuts in these 8 holes

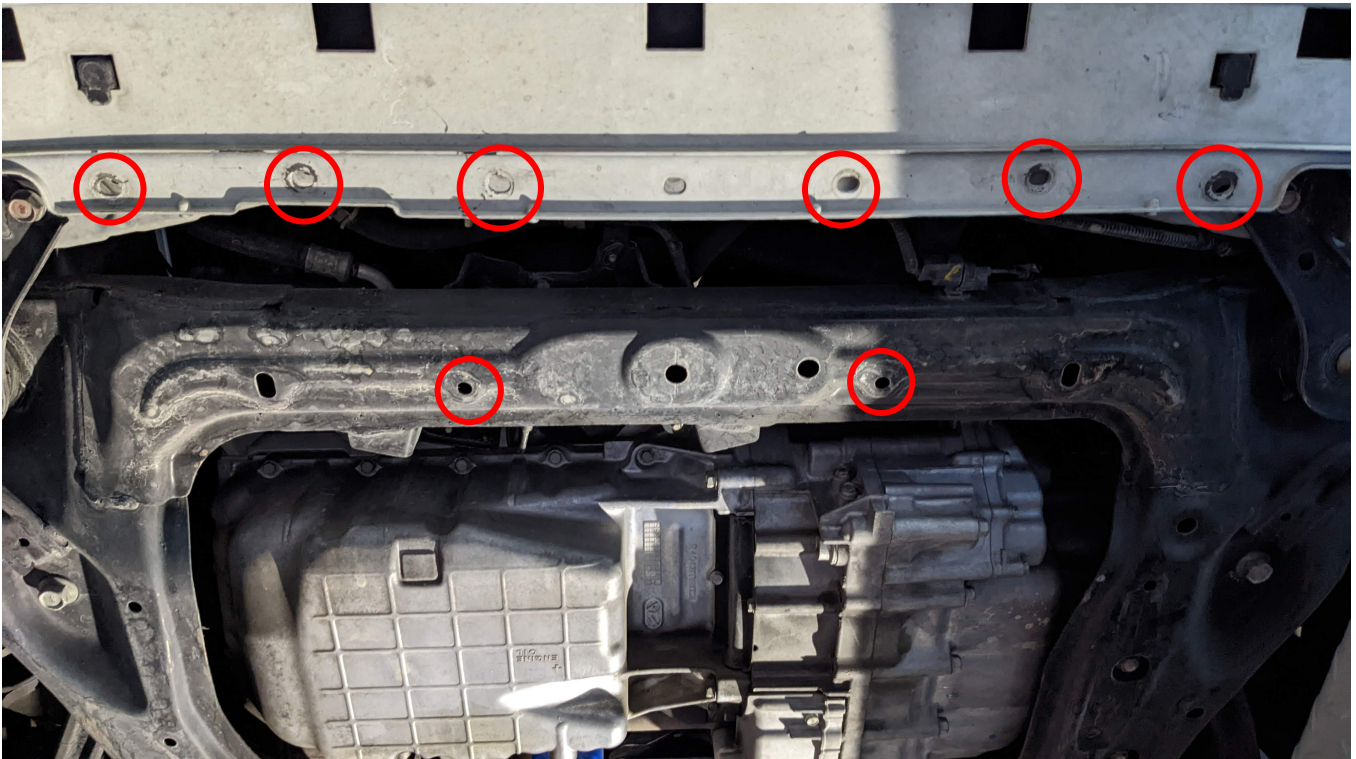


#3 Install 4 rivet nut holes in the RED locations marked here (Green were done in previous step)

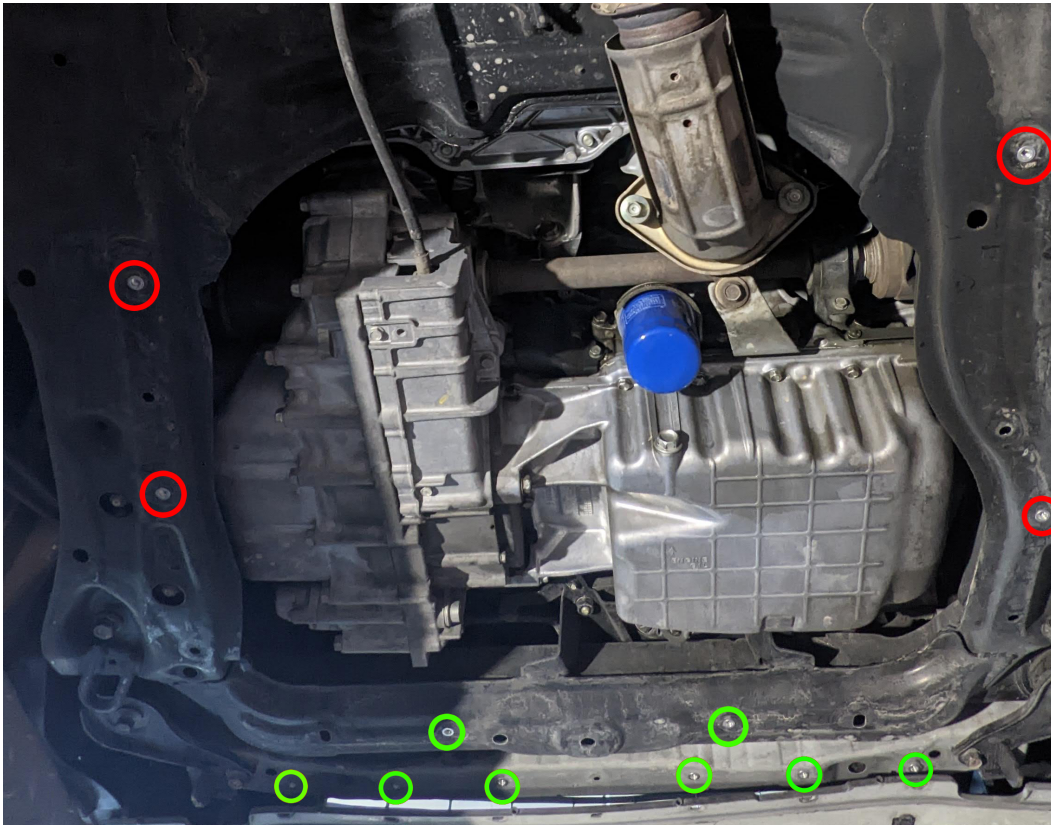


#4) Install 4 u-nuts on the main panel for overlap location

#5) Install the rear (main) panel on to car with 4 of the M6 bolts into the locations from step 3  
**Keep bolts loose until ALL bolts are in place.**

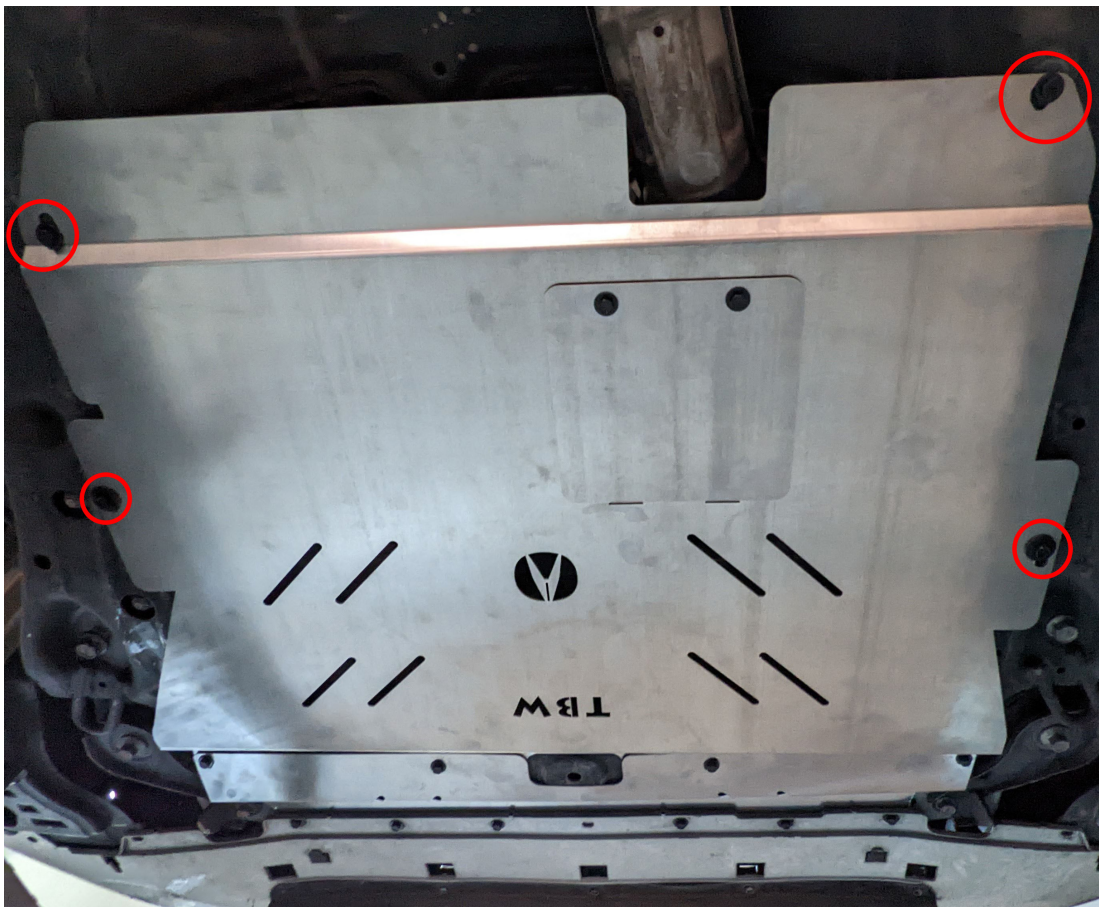

#6) Overlap and place front panel on top of the rear panel – corners will attach with a u-nut and bolt  
Keep bolts loose until ALL bolts are in place.

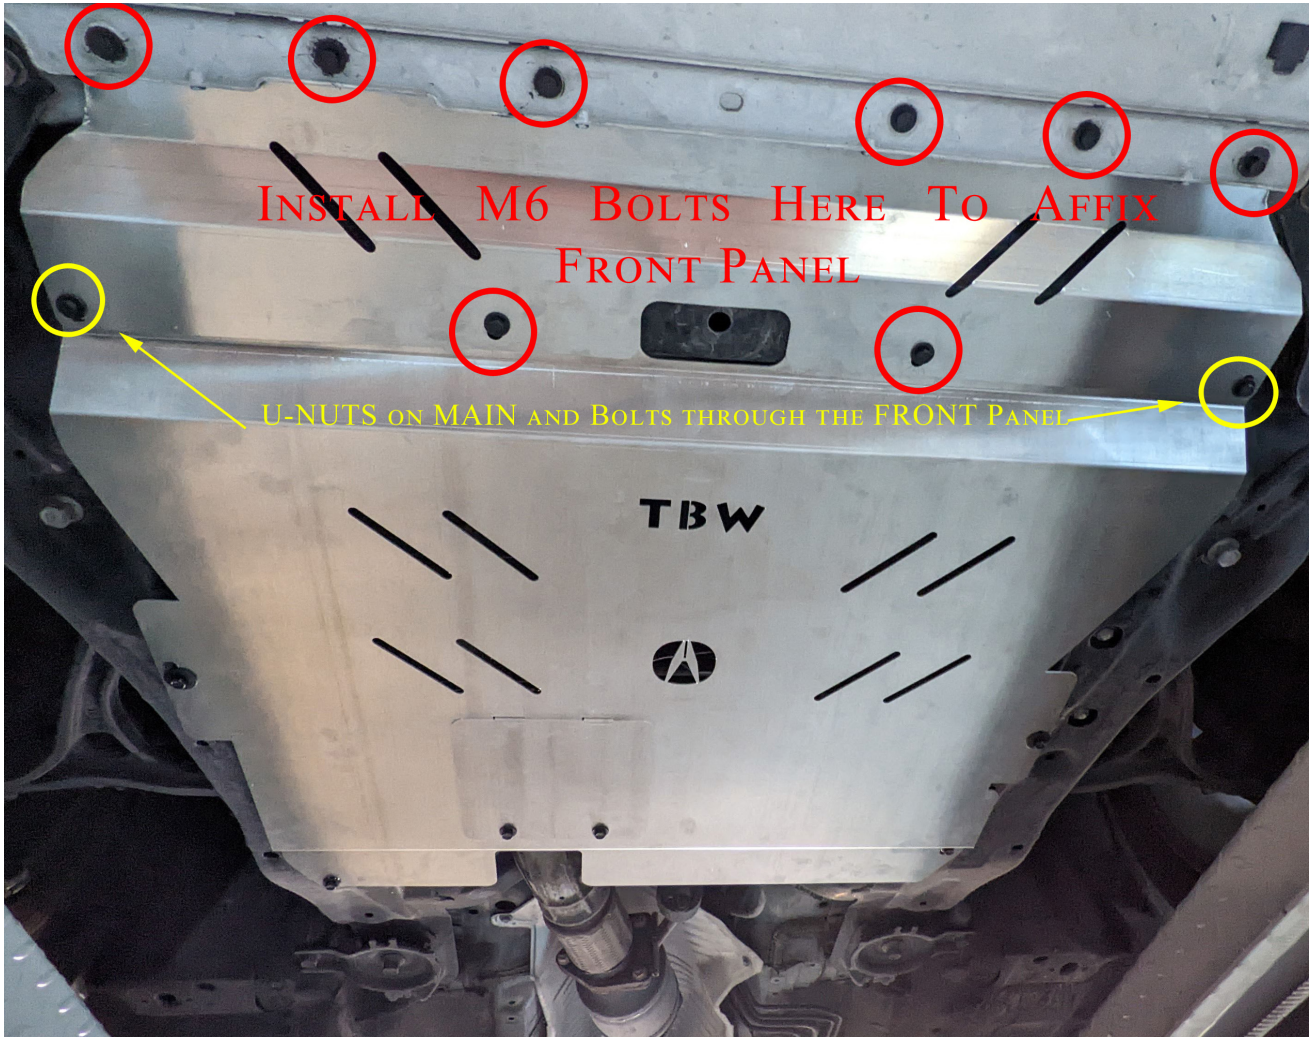

#7) Install the M6 bolts on all front panel holes. Six of these bolts will thread into the rivet nuts (RED) from step 3 and the other two will thread into the U-nuts from step 6.

#8) Tighten all bolts down to approx 15 -20 ft lbs. Just hand tight is fine.