

TBW Under Tray Install

2006-2011 Honda Civic (8th Gen)

STUDY THESE INSTRUCTIONS BEFORE INSTALLATION.
INSTALLER MUST HAVE KNOWLEDGE OF AUTOMOBILE
SYSTEMS. IF UNFAMILIAR, WE RECOMMEND INSTALL TO BE
COMPLETED BY A QUALIFIED PROFESSIONAL.

- Tools Needed for install:
- Flathead screwdriver
- 10mm socket/wrench
- RIVET NUT Tool


WARNING!

CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES
TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND
TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL
MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.


- #1. Remove the OEM Plastic Under Tray Panel
With no plastic in place it will look like this




- #2a. Install provided 6mm Rivet Nuts in these positions

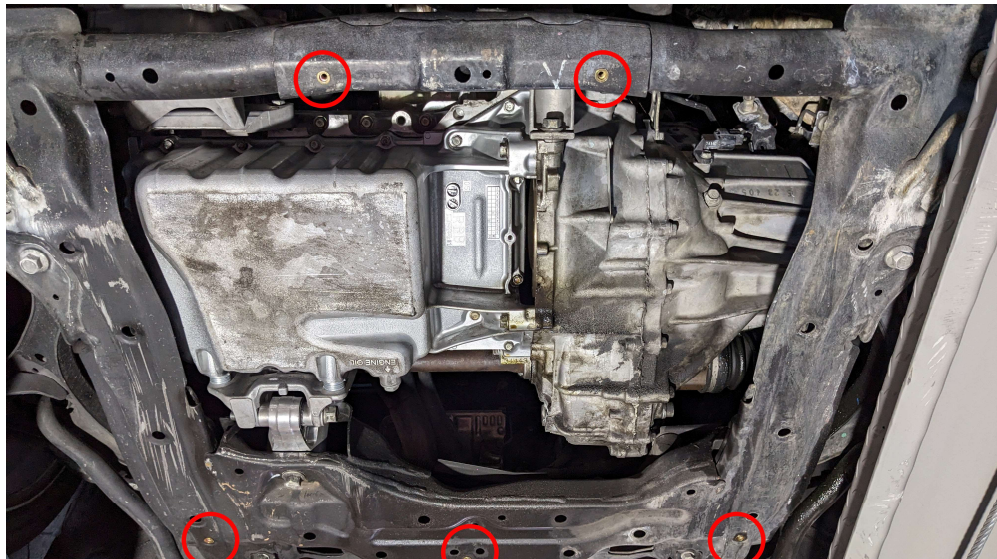

#2b. And install rivet nuts in these locations

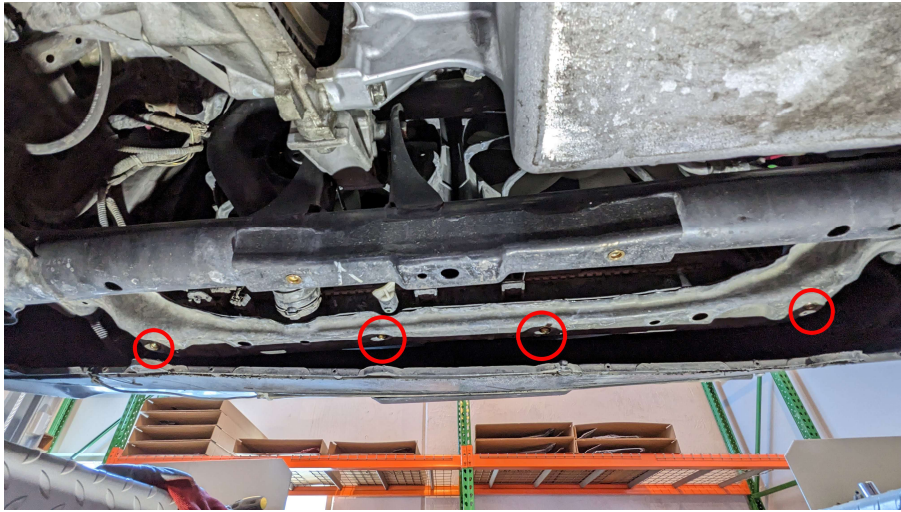

#3. Install the Main (Bigger) Panel first – Extruded U-nuts slide over the holes in the green, M6 bolts will then install in the red locations (previously installed rivet nuts in these spots)

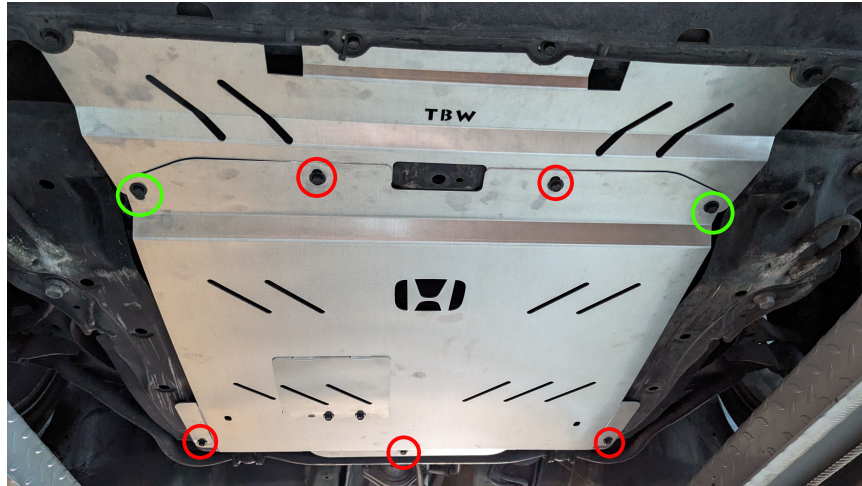

#3. Install the Front panel – using the remaining M6 bolts install the front in these locations. The overlapping bolts in the center will have to be reinstalled from the main panel

